

# Wall Panels Installation Instruction

## Hollywood wall decor panels

### **WARNING:**

Cutting, sanding or machining wood products produces wood dust. While wood products are not hazardous under OSHA Hazard Communication Standard (29CFR 1910.1200), the International Agency for Research on Cancer (IARC) and the State of California has classified wood dust as a human carcinogen.

### **EXPECT THE NATURAL VARIATION OF WOOD:**

All our wall panels are designed to highlight the natural variation of wood on structure and in color. Each wood piece is different, but all together they create an ensure consistency of the final product visual. Sunlight or intense artificial lighting can cause color changes.

### **SURFACE REQUIREMENTS:**

The surface must be clean, dry, and structurally sound. The surface must be flat to within 1/4" over 48"

### **FIREPLACES & HEATERS:**

NOT recommended the use of Hollywood wall panels around an open "flame" places. The wall panels are made from wood which is flammable material.

### **BATHROOMS:**

Hollywood wall panels may be used in bathrooms as long as they are NOT installed at high splash areas.

### **CEILING APPLICATIONS:**

Ceiling applications are possible as soon as you're following the corresponding builder codes.

### **TRIMS:**

Use trim in the same color range as wall panels for outlet trim, window trim, framing, corners, etc.

We recommend square edge trim, which is commonly used when installing any wall panels.

### **HOW MUCH DO YOU NEED?**

Calculate the total surface area of the wall and add 10% for cutting and waste. The coverage for each panel is approx. 1.8 SF. 10 panels are in the box.

### **WALL PREPARATION:**

Installing paneling over existing true walls requires no preliminary preparation. Sanding high spots on the wall is generally about all you have to do.

Always check your building code. Thermo-treated wood is Class B fire rated and most panels are only allowed to be installed over a solid wall under most building codes.

### **ADHESIVE APPLICATION:**

Adhesive may be used to apply paneling directly to walls as long as the surface is level, sound and clean. Once the panel is fitted, apply beads of adhesive with a caulking gun in a continuous strip along the top, bottom and both sides of the panel.

Some supplemental nailing might be necessary to hold the panel in place until the adhesive sets. Be sure to read the adhesive manufacturer's instructions carefully prior to installation, since instructions may vary.

### **TOOLS AND SUPPLIES FOR INSTALLATION:**

Assemble all your tools and supplies before you begin the job. Here is what you will need for most common wall paneling installations:

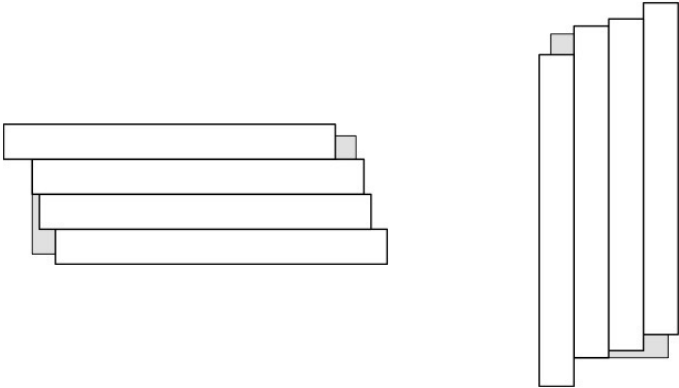
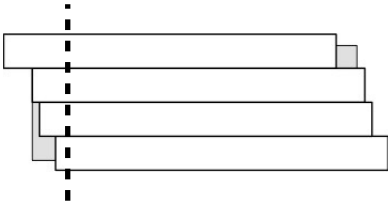
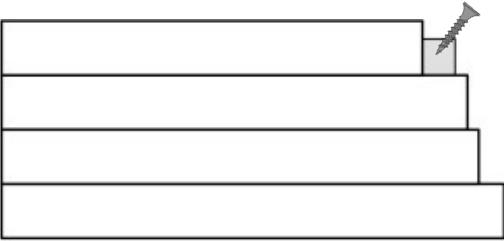
- Tape measure
- Level
- Pencil
- Finish nail gun and nail set
- Power or table saw (12"+ cutting range) with short fine-toothed blade
- Adhesive and caulking gun (if adhesive installation type is used)
- Finish nails (4D-6D)
- Standard nails or screws (4D-6D),
- Eye goggles (must be worn when using any power or hand tools)

### **PANELS MEASUREMENTS:**



# Installation Steps

## Hollywood wall decor panels

Steps	Drawing
<p><b>1.</b> Select installation orientation: horizontal or vertical</p>	
<p><b>2.</b> Using a level, draw a line for installing the starter panel. Cut the starter panel with a table saw.</p>	
<p><b>3.</b> Choice between adhesive or fastening installation.</p> <ul style="list-style-type: none"> <li>- Adhesive: lightly apply a construction adhesive and press the panel to the wall</li> <li>- Fastening: use finish nails to fasten left side of the first panel through the wood. Use staples, standard nails or screws to fasten the open area of backing plywood at the right top side.</li> </ul>	
<p><b>4.</b> Overlap the top left corner of Panel # 2 to the right top corner of Panel # 1. At the same time overlap right bottom corner of Panel # 1 to the left bottom corner of Panel # 2. Fasten the right bottom corner of Panel 1 with a finish nail. Fasten the left top corner of Panel # 2 if needed.</p>	