



## Aluminum Landscape Edging

# INSTALLATION INSTRUCTIONS

Required tools: Spade, Hammer, Hacksaw (Edger/trencher - optional)

### 1. Lay out area to be edged.

A garden hose or string works best.

### 2. Spade a vertical wedge in ground

approximately 4" deep and 3"- 4" wide.

### 3. Begin placing edging in trench with the top 1/2" (12.5cm) above what will become the compacted finish grade.

### 4. Slide ends of edging strips together to connect pieces.

Installer can connect the adjacent section of edging prior to or after the sections are placed in the trench. A minimum of 2 inches (50.8mm) of overlap is recommended, with a preferred 4 inch overlap.

### 5. Cut edging section to the desired length at the end of the bed area.

### 6. Drive spikes through holes in edging at a 45 degree angle.

Start with the beginning piece of edging.

### 7. Stake and backfill edging


continuously to ensure straight lines, compacting both sides to ensure the finish grade is approximately 1/2" below top of edging.

If you have any questions or comments on the installation or performance of this edging, please call Sure-loc Aluminum Edging at 1-800-787-3562.

### EACH BOX INCLUDES:

**4 - 6ft Sections aluminum edging (24 linear feet total)**

**12 - Spikes**

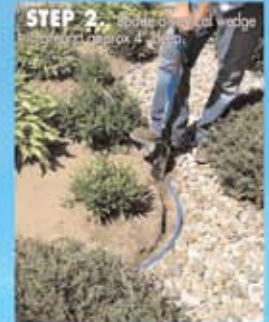

**MADE IN THE U.S.A.**