



Double Door Installation Instructions


Read all instructions before starting work. Accurate planning is the first step to a successful installation. It is advisable to have two people for this installation job.

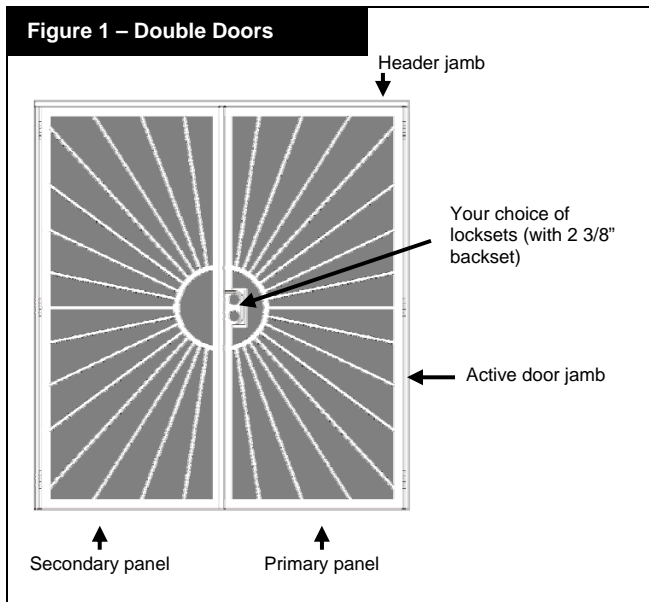

Step 1 – Attach your choice of locksets (with 2 3/8" backset). Fully extend the lock bolts into the "Locked" position.

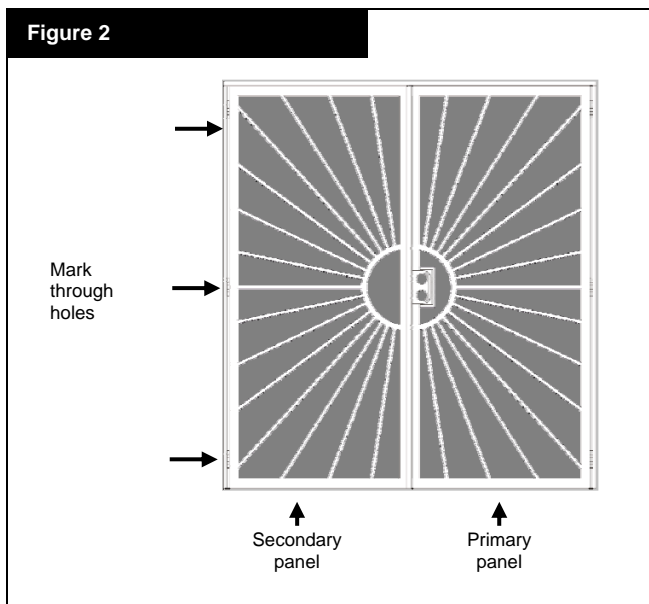

Step 2 – Position the secondary door panel (the one without locksets) in front of the proper side of the opening at the desired height, making certain that the door panel is vertically plumb. With a pencil, mark the location of the holes by marking through the pre-drilled holes on the hinge jamb. (Fig. 2) Remove the door and drill the three marked holes using a 3.16" drill bit. Fasten the secondary door panel to the house using three one-way lag screws (provided). Tighten the lag screws only half way at this time, in case adjustment is needed later in the installation process.

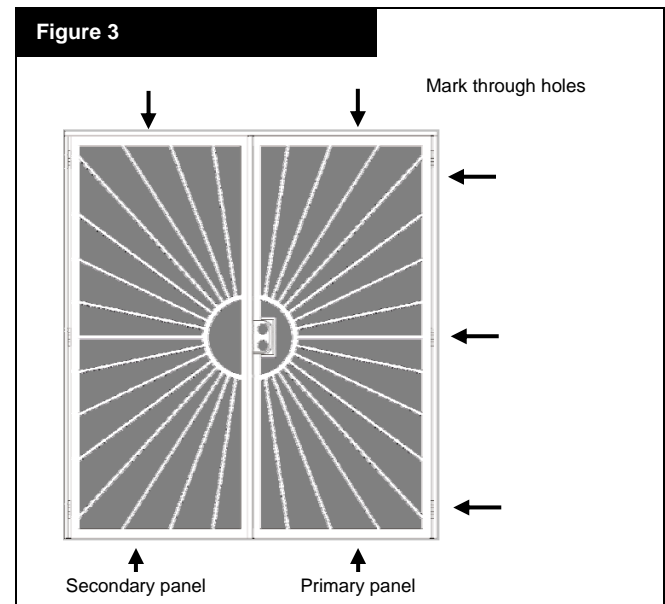

Step 3 – With the secondary door panel in the closed position, position the primary door panel (the one with the locksets installed) over the remaining opening with the extended lock bolts protruding into the respective holes in the secondary door panel. Position the header jamb above the two doors with the pegs inserted into the top of the hinge jamb on each door panel (this will help to maintain the correct spacing between the two doors). Make sure the primary door panel is plumb. With a pencil, mark the location of the holes by marking through the pre-drilled holes in the hinge jamb and the header jamb (Fig. 3). Remove the door and header and drill the five marked holes using a 3/16" drill bit. Fasten the primary door panel and header to the house using five one-way lag screws (provided). Tighten the lag screws only half way at this time in case adjustment is needed later in the installation process.

Step 4 – When you are satisfied with the position of the door panels and the smooth operation of the doors, tighten all of the lag screws securely.

Step 5 – With the secondary door panel in the closed position, fully extend the upper and lower cane bolts. Mark the locations on the door frame to be drilled for the insertion of the cans bolts. Open the secondary panel and drill holes where marked with a 9/16" drill bit.

Step 6 – Nicks or scratches that occurred during installation must be touched up with a rust-preventative paint.

For questions or warranty service contact Unique Home Designs at (877) 340-3667 from 7am to 5pm MST or send an e-mail to safehome@uhdco.com, or write to SafeHome by Unique Home Designs, at 973 N Colorado Street, Gilbert, AZ 85233