

INSTRUCTIONS


for using the

HANDE

TOILET AUGER

1. Cable is inserted into bowl with crank handle extended to its limit.
2. Turn the crank handle clockwise to work the cable through the passage until the obstruction is either forced down the line or caught and removed by pulling back on the handle.

DO NOT FORCE THE CABLE through bends—if the cable head becomes lodged continued pressure can cause cable breakage. If cable becomes lodged, turn the crank handle counterclockwise to relieve tension and start procedure again.

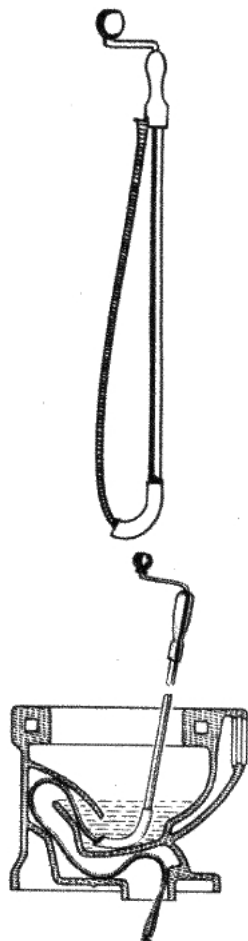

**SPECIFY ONLY GENUINE
ELECTRIC EEL REPLACEMENT CABLES**



ELECTRIC EEL MANUFACTURING CO., INC.
501 West Leffel Lane, Springfield, OH 45501-9985
Call Toll-Free (800) 833-1212 (937) 323-4644
FAX: (937) 323-3767 www.electriceel.com