

PEGASUS[®]
LUXURY AT HAND™
For models: 273349



Tools:

- Pipe tape
- Adjustable wrench
- Plumber's putty
- Groove joint plier
- Phillips screwdriver
- Hex wrench

Safety Tips

- If soldering during faucet installation, the seats cartridges and washers will have to be removed before using flame. Otherwise, warranty will be void on these parts.
- Protect your eyes with safety glasses when cutting or soldering water supply line.
- Cover your drain to avoid losing parts.

Things You May Need

All installations can vary depending on how your previous faucet was installed. Not all supplies for faucet installation are included; however they are available wherever plumbing supplies are sold. When choosing your installation supplies, make sure they are IAPMO and/or CSA approved products.

Need help?
For additional assistance or service call:
1 888 328-2383 USA 1 800 487-8372 CAN
8 a.m. to 8 p.m. EST Monday-Friday
9 a.m. to 5 p.m. EST Saturday & Sunday

What you need to know

Maintenance



Your new bathroom faucet is designed for years of trouble-free performance.

Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool and harsh chemicals as these will dull the finish and void your warranty.

Important points

Prior to beginning installation, turn off the cold and hot water lines and open the old faucet to release build-up pressure. When installing your new faucet, turn the connector nuts finger-tight, then use one wrench to anchor the fitting and a second wrench to tighten the nut one additional turn. Connections that are too tight will reduce the integrity of the system. Wrap all threaded connections with pipe tape available at your local hardware or plumbing supply store. Always wrap in a clockwise direction. The fittings should be installed by a State-licensed plumber.

Preparation/Assembly

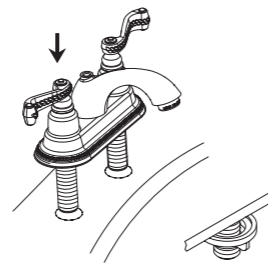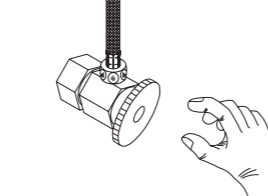


Steps 1-3A

1 Shut off water supply. Remove old faucet. Clean sink surface in preparation for new faucet.

2 Place new faucet in position on sink. From under sink, thread nuts onto faucet. Tighten nuts.

3A (A) Stainless Steel Braided Faucet Supply Tubes: This is the simplest of all installations. If you are using stainless steel braided faucet supply tubes, this faucet requires one end of the supply tube to have a 1/2" female IPS connection. The other end of this supply tube must match the thread on the water supply fittings or shut off valve under your sink. Once you have identified the required tube, carefully follow the manufacturer's installation instructions for each tube.

Installation

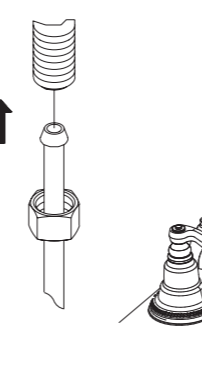

Installation - Pop-Up drain



Steps 3B-6


3B (B) Ball Nose Flexible Supplies: If you are using ball-nose flexible supplies to connect the faucet to water supply lines: Slip coupling nut behind ball-nose of flexible supply tube. Ball nose coupling will go partially into IPS shank or fitting. Tighten coupling nut (DO NOT OVER TIGHTEN). Install opposite end according to manufacturer's instructions for both tubes.

4 Important: After installation is completed, remove aerator. Turn on water supply and allow both hot and cold water to run for at least one minute each. While water is running, check for leaks. Replace aerator. Tighten nuts slightly to stop minor leaks. If problems persist, refer to trouble shooting chart.

1 Remove flange from pop up main body. Leave large black washer (not included with plastic pop ups) and nut on drain body.

2 Unscrew the nut from the pop up body and take off the spring clip from the ball rod (please note: retain the white packing ring on the ball rod), and place the nut in the ball rod. Insert the ball rod into the side hole of drain, slide the nut on and tighten securely.

Installation

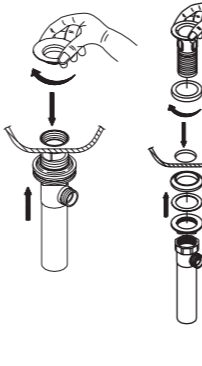

Steps 7-10

3 Place a ring of putty around drain opening of sink. Insert threaded end of drain body up through drain hole and attach flange to body with ball rod pointing to rear of sink.

4 Thread locknut from underside of sink until rubber washer seats securely inside opening of sink. Tighten locknut. Wipe excess putty. If model has plastic wing nut, tighten securely. If nut brass, tighten with wrench.

5 Place one end of spring clip on end of ball rod. Insert rod across and through hole in lift rod strap. Secure other end.

6 Insert bottom of lift rod into hole at top of pop-up strap. Tighten with thumb screw.

Installation


ADJUSTING LIFT ROD

Adjust lift rod function by adjusting location of thumb screw along the lift rod or by adjusting the hole in which ball rod goes through strap.

Be sure to leave enough space between lift rod knob and faucet spout when rod is down.

- | | |
|-------------------------------------|-------------|
| 1° Handle Cap | A662547 |
| 2° Screw (3/16" -24 * 11/16" L) | A008233 |
| 3-a° Metal Handle-Cold | A552146C |
| 3-b° Metal Handle-Hot | A552146H |
| 4° Washer (Inner) | A200109 |
| 5° Handle Base | A663466 |
| 6° O-Ring (Ø1-1/8" ID * Ø1-1/4" OD) | A048029 |
| 7-a° Ceramic Disc Cartridge-Cold | A507072N |
| 7-b° Ceramic Disc Cartridge-Hot | A507071N |
| 8° O-Ring (Ø3/4" ID * Ø15/16" OD) | A004028N |
| 9° Aerator | A500548N-50 |
| 10° O-Ring (Ø3/8" ID * Ø5/8" OD) | A004019N |
| 11° Nut | A009010 |
| 12° Putty Plate | A011081NF |
| 13° Lock Nut | A009007 |
| 14° Coupling Nut | A009016 |
| 15° Pop-up Plunger Assembly | A663121 |
| 16° Washer and Nut | A663122 |
| 17° Pop-up Body | A605222 |
| 18° O-Ring (Ø3/16" ID * Ø5/16" OD) | A048044 |
| 19° Lift Rod | A025039 |
| 20° Lift Rod Strap | A663521 |
| 21° Washer (Outer) | A200009 |
| 22° Ball Nut | A009063 |
| 23° Spring Clip | A120030 |
| 24° Ball Rod (6-5/16" L) | A026004 |

Parts diagram

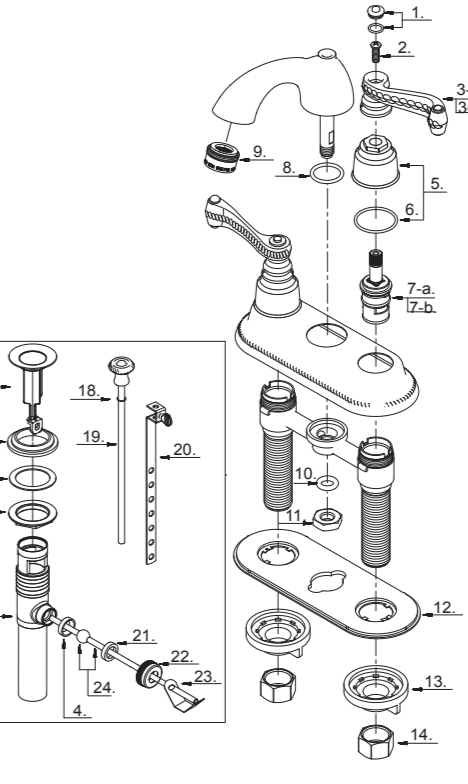

Troubleshooting

PROBLEM

Leaks underneath handle.

CAUSE

Retainer nut has come loose or O-ring on cartridge is dirty or twisted.

ACTION

1. Move the handle to the off position. Unscrew the handle screw and remove the handle (Diagram A).
2. Tighten the retainer nut by turning it clockwise (Diagram B). Move the cartridge stem to the on position. The leak should stop draining out from around the cartridge stem.
3. If the leak does not stop, shut off the water supply. Remove the retainer nut by turning it counter clockwise. Lift out the cartridge valve (Diagram C). Inspect the larger O-ring on the cartridge bonnet and the smaller O-ring on the cartridge stem. Remove any debris from the O-rings. If either O-ring is twisted, straighten it out. If either O-ring is damaged, replace it.
4. Position the cartridge back to the faucet body (Diagram D). Make sure the wings on the two sides of the cartridge bonnet fit into the cuts on the two sides of the faucet body. Tighten the retainer nut onto the faucet body.
5. Re-install the handle.

PROBLEM



Water does not completely shut off.

CAUSE

Rubber valve seat is dirty, stuck or broken.

ACTION

1. Shut off the cold water supply. If leakage stops, the problem is on the cold side. If leakage continues, the problem is on the hot side. Shut off the hot water supply to determine if both the cold and hot sides have a problem.

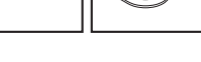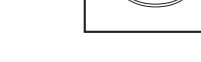

2. Remove the handle on the problem side. Loosen the retainer nut by turning it counter-clockwise (Diagram E). Lift out the cartridge assembly.
3. Inspect the larger O-ring on the cartridge bonnet and the smaller O-ring on the cartridge stem. Remove any debris from the O-rings. If either O-ring is twisted, straighten it out. If either O-ring is damaged, replace it.
4. Re-position the cartridge back to the faucet body. Make sure that the wings on the two sides of the cartridge bonnet fit well into the cuts on the two sides of the faucet body (Diagram F). Tighten the retainer nut onto the faucet body.
5. Re-install the handle.

PROBLEM

Faucet leaks around aerator.

CAUSE

Aerator incorrectly fitted.

ACTION

1. Unscrew the aerator by turning it clockwise (Diagram G). Inspect the black rubber packing inside the aerator. The rubber packing should be flat.
2. Screw the aerator onto the spout end and tighten.

PROBLEM

Improper water pattern.

CAUSE

Aerator dirty or small parts inside aerator improperly installed.

ACTION

1. Remove the aerator from the spout end by turning it clockwise.
2. Gently flush the small parts inside the aerator to clear away any debris.
3. Re-install the small parts as shown in the exploded diagram (Diagram H). Metal screens must be flat and plastic supporter must be straight.
4. Screw the aerator onto the spout end and tighten.